

SHOULD MY READINGS BE POSITIVE OR NEGATIVE?

You should be showing positive numbers on the Footprints Real Time Dial for energy used. You should only be showing negative numbers from an MTU measuring solar or wind generation. If your Real Time power and cost readings are the wrong sign, simply swap the positions of the A and B CT connectors in the MTU (see image below). These are the two positions closest to the power cable. If the sign of the reading doesn't change, remove power on the MTU for two seconds by unplugging the grey cable or turning the breaker off, and then restore power.



If you have any questions or need further assistance, please [click this link to submit a Support Ticket](#). We have found this to be the most expedient way to provide assistance.